


# S15C Analog to Pulsed I/O Converter




## Datasheet

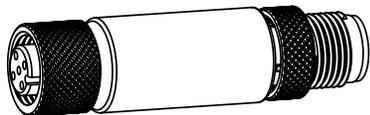

- Compact converter that connects to a current source (4 mA to 20 mA) or a voltage source (0 V DC to 10 V DC), and outputs the value as a pulsed signal, either PFM or PWM
- Rugged over-molded design meets IEC IP65, IEC IP67, and IEC IP68
- Connects directly to a Pulse Pro enabled indicator or anywhere in-line for ease of use

## Models

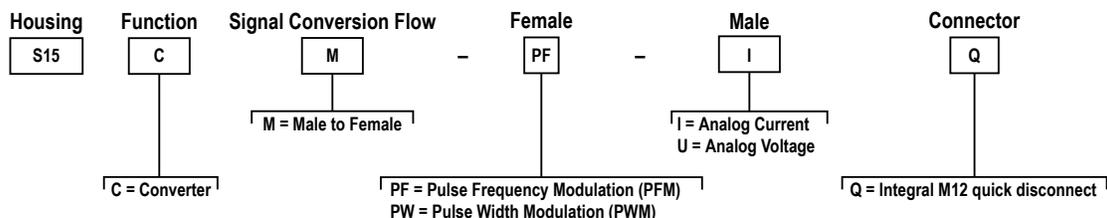

## Pulsed I/O

Pulse Frequency Modulation (PFM) is a digital way to represent an analog value by varying the frequency of a pulse train. It is measured in Hertz (Hz).

Pulse Width Modulation (PWM) is a digital way to represent an analog value by varying the width of pulses at a constant frequency. The duty cycle (on-time versus off-time) is measured in percent from 0-100.

## Wiring Diagrams

Male	Female	Pin	Wire Color
		1	Brown
		2	White
		3	Blue
		4	Black

Male (Analog Input)	Signal Description	Female (Pulse Output)	Signal Description
Pin 1	12 V DC to 30 V DC	Pin 1	12 V DC to 30 V DC
Pin 2	Analog Input (4 mA to 20 mA, or 0 V to 10 V)	Pin 2	Pulse Frequency Modulated (PFM) Output*
Pin 3	Ground	Pin 3	Ground
Pin 4	Analog Reference	Pin 4	Pulse Width Modulated (PWM) Output*

\*Only one output per device based on model



## Status Indicators

### Power LED Indicator (Green)

- Solid = Power On
- Off = Power Off

### Pulsed I/O LED Indicator (Amber)


- Solid = Pulsed output is in range and active
- Flashing = Pulsed output is at limits
- Off = Pulsed output is inactive

### Analog Input LED Indicator (Amber)

- Solid = Analog value is within valid range (4 mA to 20 mA, or 0 V to 10 V)
- Flashing = Output is at limits or out of range

Default Value Table		
Analog	PFM	PWM
0 V	100 Hz	0%
10 V	600 Hz	100%
4 mA	100 Hz	0%
20 mA	600 Hz	100%

## Connecting a Pro Light to a Sensor or PLC

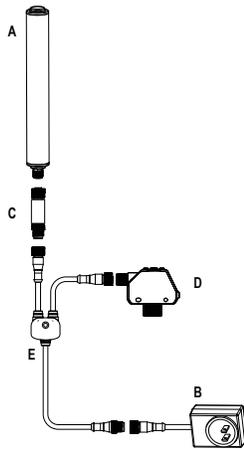

A = WLS27 Pro, WLS15 Pro, or TL50 Pro with Pro Editor

B = Power Supply (PSW-24-1 or PSD-24-4)

C = S15C Pulse Pro Converter; for model selection, see [Table 1](#) below

D = Sensor or PLC with 0-10 V or 4-20 mA analog output; for model selection, see [Table 1](#) below

E = Splitter to connect sensor and light (CSB-M1241M1241)

Table 1: Model Selection

Output: Pulse Pro (Female)	Input: Analog (Male)	
	4-20 mA	0-10 V
PFM	S15CM-PF-IQ	S15CM-PF-UQ
PWM	S15CM-PW-IQ	S15CM-PW-UQ



**Note:** For installation flexibility, see double-ended cordset options in [Accessories](#) on p. 3.

## Specifications

### Supply Voltage

12 V DC to 30 V DC at 50 mA maximum

### Supply Protection Circuitry

Protected against reverse polarity and transient voltages

### Sampling Rate

20 Hz

### Indicators

Green power  
 Amber pulse output present  
 Amber analog value present

### Connections

Integral male/female 4-pin M12 quick disconnect

### Construction

Coupling Material: Nickel-plated brass  
 Connector Body: PVC translucent black

### Vibration and Mechanical Shock

Meets IEC 60068-2-6 requirements (Vibration: 10 Hz to 55 Hz, 0.5 mm amplitude, 5 minutes sweep, 30 minutes dwell)  
 Meets IEC 60068-2-27 requirements (Shock: 15G 11 ms duration, half sine wave)

### Certifications



### Environmental Rating

IEC IP65, IEC IP67, IEC IP68  
 NEMA/UL Type 1

### Operating Conditions

**Temperature:** -40 °C to +70 °C (-40 °F to +158 °F)  
 90% at +70 °C maximum relative humidity (non-condensing)  
**Storage Temperature:** -40 °C to +80 °C (-40 °F to +176 °F)

### Required Overcurrent Protection




**WARNING:** Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.  
 Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.  
 Supply wiring leads < 24 AWG shall not be spliced.  
 For additional product support, go to [www.bannerengineering.com](http://www.bannerengineering.com).

Supply Wiring (AWG)	Required Overcurrent Protection (Amps)
20	5.0
22	3.0
24	2.0
26	1.0
28	0.8
30	0.5

## Dimensions

All measurements are listed in millimeters [inches], unless noted otherwise.



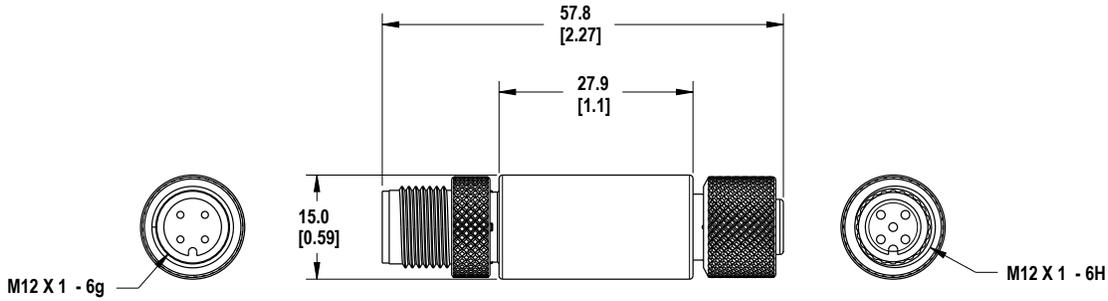


## Accessories

### Cordsets

4-Pin Threaded M12 Cordsets—Double Ended				
Model	Length	Style	Dimensions	Pinout
MQDEC-401SS	0.31 m (1 ft)	Male Straight/Female Straight		Female
MQDEC-403SS	0.91 m (2.99 ft)			
MQDEC-406SS	1.83 m (6 ft)			Male
MQDEC-430SS	9.14 m (30.2 ft)			
<p>1 = Brown 2 = White 3 = Blue 4 = Black</p>				

5-Pin Threaded M12 Shielded Twisted Pair Cordsets—Double Ended				
Model	Length	Style	Dimensions	Pinout (Female)
MQDEC-STP-501SS-FF	0.31 m (1 ft)	Female Straight/ Female Straight		
<p>1 = Brown 2 = White 3 = Blue 4 = Black 5 = Shield</p>				

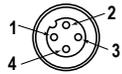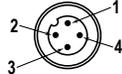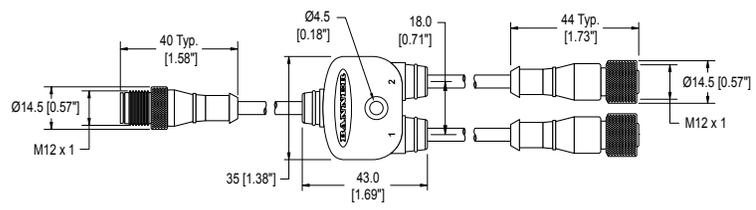4-Pin Threaded M12 Splitter Cordsets—Flat Junction			
Model	Branches (Female)	Trunk (Male)	Pinout
CSB-M1240M1240	No branch	No trunk	<p>Female</p>  <p>Male</p>  <p>1 = Brown 2 = White 3 = Blue 4 = Black</p>
CSB-M1240M1241	2 × 0.3 m (1 ft)	No trunk	
CSB-M1241M1241		0.30 m (1 ft)	
CSB-M1248M1241		2.44 m (8 ft)	
CSB-M12415M1241		4.57 m (15 ft)	
CSB-M12425M1241		7.60 m (25 ft)	
CSB-UNT425M1241		7.60 m (25.0 ft) Unterminated	
			

## Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

**THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.**

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: [www.bannerengineering.com](http://www.bannerengineering.com).

For patent information, see [www.bannerengineering.com/patents](http://www.bannerengineering.com/patents).

## FCC Part 15 and CAN ICES-3 (B)/NMB-3(B)

This device complies with part 15 of the FCC Rules and CAN ICES-3 (B)/NMB-3(B). Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules and CAN ICES-3 (B)/NMB-3(B). These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the manufacturer.